



FAQ'S for Air Wars Battle Drones

What is the Warranty for Air Wars Products?

MGA Entertainment has a 30 day limited warranty with a valid sales receipt.

Click here to view warranty information:

<http://www.mgae.com/en-us/section/customerservice/warranty/>

How do I sync/pair my drone to a controller?

Important: Pair only one drone at a time to prevent interference.

Turn off (0) other drones to prevent interference.

Turn off the controller and drone for 30 seconds before pairing

Turn on 1 drone (pair 1 at a time) Both lights on top of drone will blink

Turn on one controller. The pairing light will blink (pairing works best at a 3ft distance)

Move joystick up

Move joystick down

Wait until pairing light turns off

Press Auto Take Off/ Landing button to hover

Click here for video instructions:

<https://www.youtube.com/watch?v=LS6bGIIY2A>

My Drone is not flying or is flying erratically.

Drone may have been unpaired.

Click here to see video:

<https://www.youtube.com/watch?v=LS6bGIIY2A>

Point the controller towards the drone when flying and stay within 50 feet at all times

Check the drone thoroughly for any damage or missing parts

If the drone seems unstable after a crash, recalibrate it

Click here to see video:

<https://www.youtube.com/watch?v=LS6bGIIY2A>

Turn ON one controller and one drone.

Pair the drone to the controller. Drone and controller lights will be solid.

Push and hold joysticks on the controller to the bottom left.

The red and green drone lights will blink for several seconds.

The lights will remain solid when calibration is complete.

The drone may have shut off on its own if it detects a problem

* To restart, turn **OFF** the drone and back **ON**, then pair the controller again

The propellers move, but the drone does not.

The propeller may be broken. Check for broken or missing propellers and replace as necessary.

Click here for instructions on replacing propellers:

<https://www.youtube.com/watch?v=lxrl9PQ81JE>

The propellers may be installed incorrectly. Make sure the propellers are in the proper location on the drone and reinstall. Never push the propellers too far or too hard onto the drone to prevent bending.

The drone will not fly after pairing.

After you turn **ON** the drone and place it on a flat surface, you only have a few seconds to pair.

Turn on the controller. Then, quickly press the joystick up, then down. Once the pairing light turns off, press the **AUTO TAKE OFF/LANDING** button.

Pairing works best with distance of approximately 3 feet between the controller and the drone.

Click here to watch additional tips:

<https://www.youtube.com/watch?v=LS6bGIIY2A>

The drone crashes unexpectedly

-The drone may need to be recharged

Click here to view charging instructions:

<https://www.youtube.com/watch?v=lxrl9PQ81JE>

- Confirm the propellers are properly attached to the drone in their respective locations.

How long does a full charge last?

A fully charged drone can last approximately 6 minutes of play time.

How do I know my drone is fully charge?

Charging times may vary, when the green LED on top of the drone lights up, charging is complete. Blinking red on top of drone indicates needs to be charged or charging.

My Battle Drone only flew for few minutes.

The batteries included in your controller and charge on drone come ready to play at 50% battery power. Before you begin, it is recommended you charge the drone to full play capacity and replace the batteries in remote for new fresh alkaline batteries.

Are the blades replaceable?

Yes, each box comes with a replacement kit that includes

- 4 A propellers
- 4 B propellers

Click here to view contents:

<https://www.youtube.com/watch?v=lxrl9PQ81JE>

Can you purchase extra blades/Weapons?

Replacement parts are not available for purchase.

What batteries are required?

The remote requires 3 AAA Batteries. The Drone requires to be charged with the charging cord into a computer or wall adapter.

Click here for charging instructions:

<https://www.youtube.com/watch?v=lxrl9PQ81JE>

What is the recommended age?

The recommend age for Air Wars Battle Drones is 8yrs+

How do I change the speed of my Air Wars Battle Drones?

Press the top right hand side of your controller to adjust your speed from slow, to medium, to fast speed.

Click here to watch video instructions:

<https://www.youtube.com/watch?v=LS6bGIIY2A>